 


# egg<sup>®</sup>

smart motion rocker

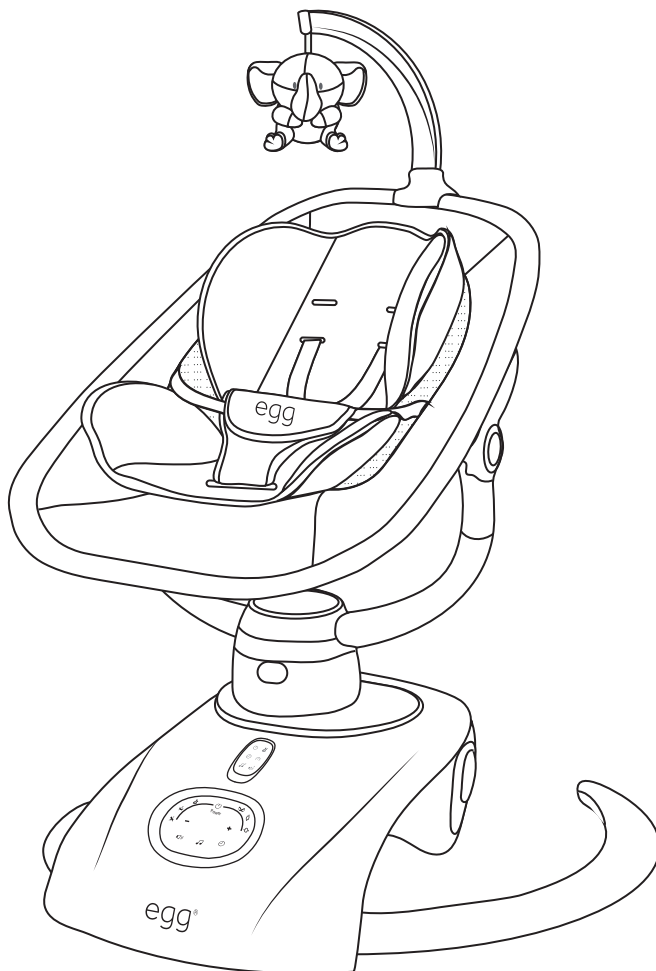

INSTRUCTION MANUAL

## **IMPORTANT! READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.**

- Your child's safety may be affected if you do not follow these instructions.
- Use only spare parts delivered by the manufacturer for replacing parts or repairs.
- Damage caused by overloading or incorrect folding are not covered by the warranty.
- Prolonged exposure to sunshine may cause changes in the colour of materials and fabrics.
- Do not expose this product to extreme temperatures. Extreme sunshine or temperatures may cause colour changes or bent parts.

### **WARNING:**

- Never leave the child unattended.
- Stop using the product when the child starts trying to sit up.
- Never use this product on an elevated surface (e.g. a table).
- Always use the restraint system.
- Never use the toy bar to carry the product.
- Do not move or lift this product with the baby inside it.
- Never let the child sleep in this product. This product does not replace a cot or a crib. Should the child fall asleep, then it should be placed in a suitable cot or crib.
- Do not use the product if any components are broken or missing.
- Do not use accessories or replacement parts other than those approved by the manufacturer.

### **IMPORTANT:**

- Adult assembly required.
- Use for babies aged up to 6 months with maximum weight 9kg.
- Do not use the product for more than one child.
- The product is not a substitute for a cot or bed. If the child needs sleep, you should put them in a suitable bed or cot.
- Do not use the product if there are missing or damaged parts.
- If parts are missing or broken, please contact the store where you bought the product, before using.
- The manufacturer revokes all responsibility in case you have used spare parts different from the approved type or not recommended by the producer.
- Keep away from fire.

- Do not tie strings or cords to the product to avoid risk of suffocation.
- All settings regarding the power supply – turning on/off, replacing or charging of batteries to be done only by adult.
- Use only the AC/DC adaptor supplied by the manufacturer.
- Regularly check the good working order of the AC/DC adaptor. Discontinue use in case of damage.
- Do not allow presence of children under 3 years before assembly is complete to avoid their access to small or disassembled parts.
- Do not rotate the seat by 90 degrees when swing mode is on as it may damage the swing mechanisms.

## **WARNING:**

Please keep all packaging material away from babies and children, to prevent suffocation.

## **Remote control powered by coin/button batteries**


### **WARNING:**

This product contains a coin/button battery. A coin/button battery can cause serious internal chemical burns if swallowed.

Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Manufactured and tested in compliance with EN 12790-1:2023

# COMPONENTS

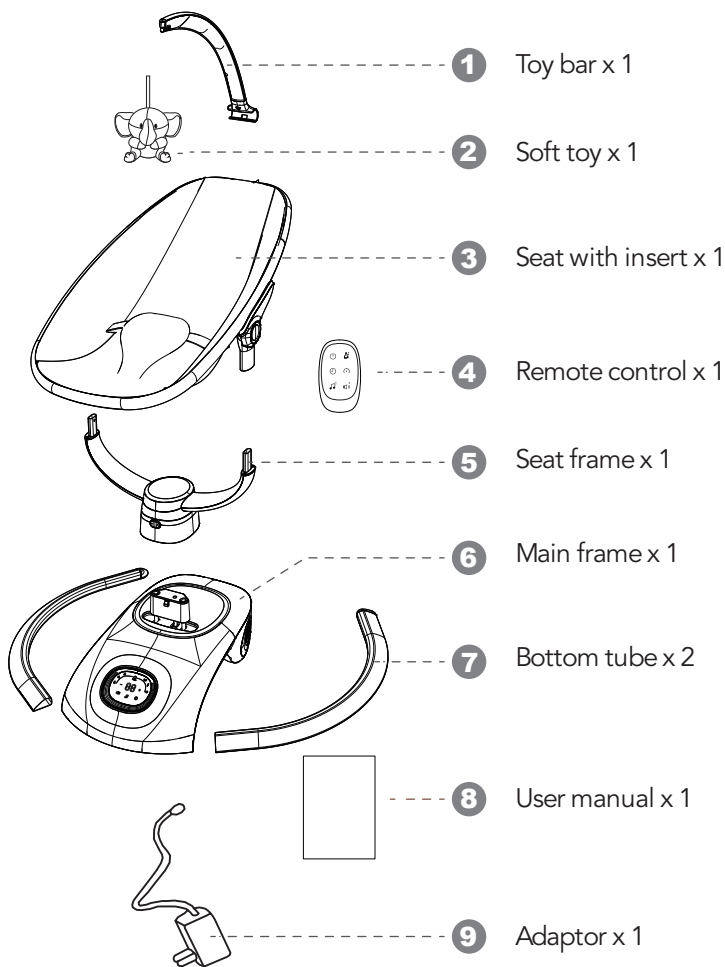

The illustrations in this manual are used to demonstrate the operation of the product. Where there are small differences between the physical object and the illustrations, the physical product shall prevail.



# INSTALLATION

Install bottom tubes:

Insert the two bottom tubes into the main frame (figure 1-1).

Press the spring plate and insert, the tubes are inserted correctly when the spring plate pops out the hole (figure 1-2).

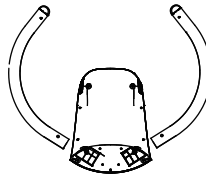


Figure 1-1

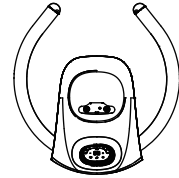


Figure 1-2

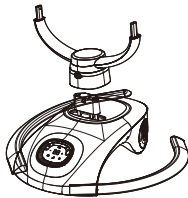


Figure 2-1

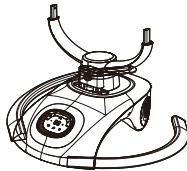


Figure 2-2

Seat frame installation:

Insert the seat frame on top of the main frame (figure 2-1). When you hear a 'click' it is installed correctly.

If you don't hear the sound, push it down slightly until you hear it (figure 2-2).

Seat installation:

With the main frame on the ground, gently insert the seat onto the support frame (figure 3-1), until you hear a 'click'. Check it is installed correctly before use (figure 3-2).



Figure 3-1

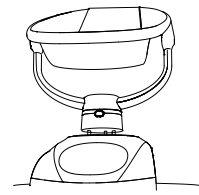


Figure 3-2



Figure 4



Figure 4-1



Figure 4-2

Toy bar installation:

Attach the toy bar to the seat back from underneath (figure 4).


Starting from underneath, hook the bar onto the frame (figure 4-1) and then push the toy bar upwards until it snaps onto the seat frame (figure 4-2).

# INSTRUCTIONS FOR USE

## 1. Power supply

It is recommended to use 12V-2A adaptor power which is standard with this product. Plug the adaptor included with the product into the 240V output socket in the household.

Plug the other end of the adaptor (round port) into the DC jack on the right of the main frame (Figure 5). It is recommended for indoor use away from damp places.

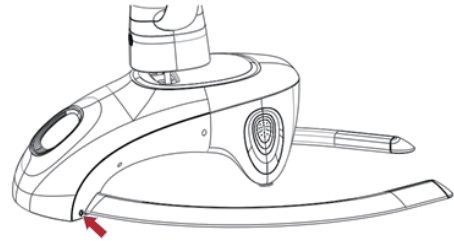

DC jack

Figure 5



## 2. Touch screen panel functions

Parents arm scene mode

 
Pirate ship scene mode

Merry-go-round scene mode

Minus

Music volume control

Music switch

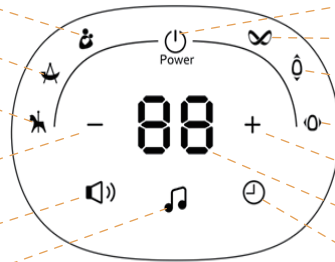

Power switch

Infinite swing mode

Up and down bounce mode

Left and right swing mode

Plus

Display area

Timer

2.1 Power switch: Press the power button to turn on/turn off; when the swing is working, pressing this button will turn off all functions including music and timer.

2.2 Timer: Use this button combined with the plus (+) and minus (-) keys to adjust the timing of the swing. The timer is up to 45 minutes, starting at 10 minutes and increasing with every press of the timer button in a cycle through 10, 20, 30, 45 minutes.

2.3 Music: Press the button to turn off/on music. You can switch through the songs using the plus (+) and minus (-) keys. The built-in tunes will play in a loop until the end and will start from track one upon power up.

2.4 Music volume: When the music is turned on the volume is medium. Press the plus (+) to increase the volume up to 5 levels. Press the minus (-) button to decrease the volume. The minimum level is 1. Level 0 mutes the music but it is still playing.

## 2.5 Swing Modes

2.5.1 Parents arm scene mode: This mode is an intelligent swing mode, the speed cannot be adjusted. It is equipped with specific music and recommended to adjust the seat to left or right 90 degrees for a better experience.

2.5.2 Pirate ship scene mode: This mode is an intelligent swing mode, the speed cannot be adjusted. It is equipped with specific music and recommended to adjust the seat to left or right 90 degrees for a better experience.

2.5.3 Merry-go-round scene mode: This mode is an intelligent swing mode and the swing speed will automatically change from slow-fast-slow. The speed cannot be adjusted and it is equipped with specific music.

2.5.4 Infinite swing mode: This mode consists of up and down swing mode and left to right swing mode. There are 5 speeds and the music can be adjusted.

2.5.5 Up and down bounce mode: This mode consists of an up and down rocking motion. There are 5 speeds and the music can be adjusted.

2.5.6 Left and right swing mode: This mode consists of left and right rocking motion. There are 5 speeds and the music can be adjusted.

2.5.7 When switching between swing modes and scene modes, a blinking state of the clicked symbol will appear. This state should blink every second, representing that the mode switch is processing. Timings between switching for different modes can differ, with the longest reaching 9 seconds. Once switching to a scene mode is complete, the digital display will form a marquee and the speed adjustment will turn off as the intelligent swing mode has commenced.

When the swing and music are on, if there is no operation for a long time, the product will automatically stop after 45 minutes.

Press and hold the volume adjustment key and the music adjustment key at the same time to turn off the ambient light, and then press and hold at the same time to turn on the ambient light.

### 3. Remote control

The remote control will work within 4 metres of the main frame control panel.

3.1 When using the remote for the first time, pull out the battery isolation film from the bottom of the battery and keep it aside. When not in use, you can insert the isolation film back to its original position to avoid power consumption and prolong battery life.

3.2 Power button: Press once to turn on the device and it enters standby mode. Press the button again and the power turns off.


3.3 Swing mode button: After the power is turned on, press this button to start swinging. There are 6 modes in total which can be switched in turn by pressing this button. The corresponding light on the main frame will light up to show which mode is on.

3.4 Swing speed button: Press in turn to increase through the 5 speeds.

3.5 Timer button: Press once to increase by 10 minutes, through to 20, 30 and 45 minutes in a cycle. There are corresponding light indicators.

3.6 Music button: Press and the music will play. Press again to select the next track. Songs are played on repeat in a loop. Long press this button to turn off the music.

3.7 Volume button: When the music is playing, the default volume of the system is medium. Press this button and the volume will increase by one level, until the maximum of 5. Level 0 mutes the music but it still plays.

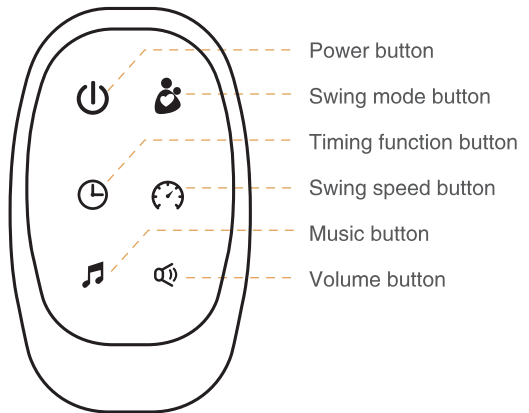

#### 4. Seat adjustment

There are 3 angles for this seat. Press the backrest adjustment buttons either side of the seat at the same time to adjust the angle (Figure 6).

DO NOT adjust the seat angle when a child is in the seat.

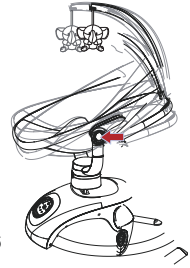


Figure 6

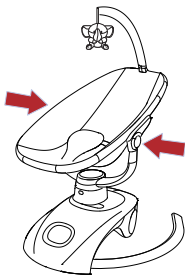


Figure 7

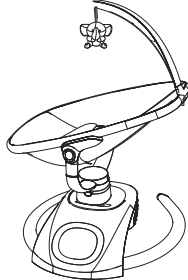


Figure 7-1

#### 5. Seat rotation

Hold the seat with both hands as displayed in Figure 7 to rotate. You do not need to press the buttons in. The seat can rotate only 90 degrees left and right.

The seat cannot be rotated 360 degrees.  
NOTE: Do not rotate the seat when swing mode is on as it may damage the swing mechanisms.

## PRODUCT DISASSEMBLY

Remove the seat: Press the spring plate as shown by the arrows in Figure 8 and then pull up the seat on the left and right sides respectively.

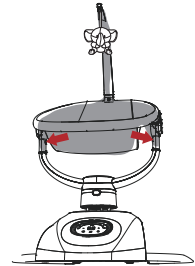


Figure 8

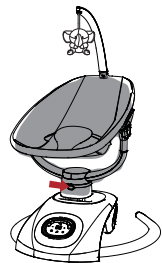


Figure 9

Remove the seat support frame: Press the button in Figure 9 and lift the frame with both hands to remove.

Remove the bottom tubes: Once you have removed the seat and support frame, put the main frame upside down, press the spring plate and pull out the tube (Figure 10).

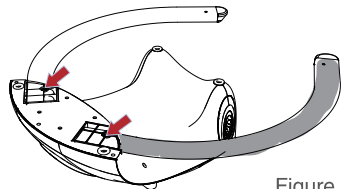


Figure 10

## ADDITIONAL INFORMATION

After connecting the power, you can press the music button to start the music without being in swing mode.

The motor has a protection mechanism: When the product is in swing mode and blocked by an external force, the product will detect the swing is blocked and automatically stop all functions. Turn off the power supply and turn back on to work normally away from the obstruction.

Mode characteristics: Parents arm mode, Pirate ship mode and the Merry-go-round mode have fixed speeds, it cannot be adjusted. For Parents arm mode and Pirate ship mode, the seat should be rotated 90 degrees.

Usage of harness: First unfasten the safety harness and place in a suitable position. Then place baby in the swing and buckle the seat belt and waist belt together. The safety harness must be used to ensure baby's safety.

## CLEANING AND MAINTENANCE

Seat cleaning: The fabrics on the seat cannot be removed for cleaning. If you need to clean them, use a damp cloth and mild detergent, and dry thoroughly. Do not wash directly with water. This product is not waterproof, wipe frames with a damp cloth and dry.

To prolong the life of your nursery product, keep it clean and do not leave in the direct sunlight for extended periods of time.

Do not use abrasive cleaners. Do not soak in water.

Always store your product in a clean dry place.

Do not leave in the boot of car.

Avoid exposure to salt water, as this may encourage the formation of rust. If product is used in this environment completely clean your product afterward to remove sand and salt from mechanisms.

Should parts become stiff, squeak or difficult to operate ensure dirt is not the cause.

When storing product, never stack other items on top of it, this may damage the product.

Do not dry clean or use bleach.

In some climates the parts may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well ventilated area.

Always check parts regularly for tightness of screws, nuts and other fasteners, tighten if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts.

Use only parts and accessories approved by the supplier.

# WARRANTY POLICY

## KEEP YOUR ORIGINAL RECEIPT OF PURCHASE SAFE WITH YOUR WARRANTY INFORMATION

It will be required should you unfortunately find a defect. The receipt must show the date of purchase clearly. In the first instance you must contact the original place of purchase. Exchanging or returning the product cannot be requested. Repairs to any part of this product do not extend the warranty period. Do not return your product direct to the manufacturer.

## DISCLAIMER

Whilst we believe the information set out in this instruction manual to be correct and reliable at the time of print, we do not accept responsibility for its accuracy and we shall not be liable for its interpretation and its use. We reserve the right to change, modify, add or delete product specifications at any time without prior notice.

## YOUR WARRANTY POLICY

At BabyStyle, we guarantee your product has been manufactured in accordance with all current European safety standards which are applicable to this product, and that this product is free from any defects in workmanship and material at the time of purchase. During the production process this product has gone through rigorous quality checks. Despite our efforts, if this product does show a manufacturing or material defect within the 24 months warranty period for the frame and 6 months for the fabrics we will comply to the warranty terms and conditions providing the product has been used for normal use as described within the instruction manual and it has been maintained correctly as described in the instruction manual, for further information please contact the place of purchase. Please retain your original receipt of purchase safely.

# WARRANTY TERMS

- Frame: 24 consecutive months.
- Fabrics: 6 consecutive months.
- The warranty only applies to the original purchaser and is non-transferable.

The warranty will be invalidated in the following circumstances:

- The product has not been used for its purpose other than described within the instruction manual.
- If the product is returned for repair through a dealer not authorised by us.
- If the original receipt of purchase cannot be provided.
- If the defect is as a result of improper use or incorrect maintenance, negligence or impact damage.
- If the parts show normal wear and tear that may be expected from daily use of the product.
- The warranty of this product becomes valid from the date of purchase as stated on the original receipt of purchase. This does not affect your statutory rights.

Register your product today at [babystyledirect.co.uk](http://babystyledirect.co.uk).

## NOTE:

The music production comes from:

EarLing.com <https://www.ear0.com/sound/10262>

Starry Sky License: CC-BY Author Xia Yijie

The sound of cicadas in the mountain village at night License: CC-BY Author: Yu Yu

Tian Shui License: CC-BY Author: ouning

Car racing field recording License: CC-BY

Classical Guitar Solo License: CC-BY Author: lucasgonze

Chord music for ukulele License: CC-BY Author: qubodup

We are proudly part of the



[b-p-a.org](http://b-p-a.org)



egg  
36 Charles Street, Sileby,  
Leicestershire LE12 7RJ

United Kingdom

T: 01509 816444  
E: [info@babystyle.co.uk](mailto:info@babystyle.co.uk)  
[babystyle.co.uk](http://babystyle.co.uk)

©BabyStyle UK Ltd. AW12122023